

## **Some Other Popular Toys**

Bump-N-Go Fire Engine #131

Ring Around Bells #23

Dome Alone #69

Dome Alone with Switch #71

Drum #80

Musical Rolling Pin #160

Musical Light Box #200

Barbie Corvette #308

Stacking Ring Cone #360

Musical Top #400

Vibrating Light with Music #459

Glitter Roll #696

Motorized Glitter Roll #697

Butterfly Light and Music Puzzle #922

Traffic Light #1800

# **Mini Stunt Remote Control Car**

---

## **Catalog #316-M**

### **User's Guide**

### ***Play on your tray!***

Popular mini stunt car responds to your ability switch (not included). Kids love this toy they will play with this car for many hours. Size: 2.5"L x 2.25"W x 2.5"H. Requires 3 AA Batteries (Not included).

#### **Operation:**

1. To install the batteries turn the controller over and unscrew the battery cover with a Phillips Head Screwdriver. Lift cover and install 3 AA batteries (Not included). Replace cover and screw.
2. Open the side charging door on the controller and plug the Mini Stun car into the charging jack. Once you have plugged the car in a red LED light on the charger will come on, and stay on for about 60 seconds or so. When the LED goes out the car is fully charged. **Please Note: you can have the car's ON/OFF switch set either way during charging, but it is best to have the car set to ON for best charging.**
3. When done charging unplug the car and turn it to ON if not already and place it in the holding tray. (This car can be used outside of it's tray as well.) When using the car in the tray there is no need to extend the control's antenna fully, as long as the remote will be close to the car. If not you must extend the antenna fully.
4. Plug from one to four external switches (Not included) into the jacks on the remote to control the stun car. Each switch will control a different direction of the car .e.g. Forward, Reverse, Left and Right. You can also use the remote without switches, using the built in controls of the remote. The car will only move in the direction you choose for as long as you activate your switch or the remotes control. Once the switch is released the car will stop.

#### **Please Note:**

**After the car has done flips, the car's drive gears may disengage, as a safety feature to prevent gears from locking up. This is normal. To get the car running again, with the controller flip the front wheels once. This should restore the movement to the car.**

#### **Troubleshooting:**

**Problem:** The Mini Stunt Car is not running.

**Action #1:** Make sure that you press all connections firmly together (**when using external switches**). Any gaps may interrupt electrical connection.

**Action #2:** Make sure batteries are fresh and or the Mini Stunt Car is fully charged.

**Action #3:** Try a different switch with your Mini Stunt Car to rule it out as the source of the problem.

**Problem:** The Mini Stunt Car is running intermittently.

**Action #1:** Replace batteries in the remote control and charge the car. Weak batteries will severely limit the normal transmitting range of your remote control.

**Problem:** Vehicle does not react, or reacts poorly to operation by transmitter.

**Cause:** High-frequency interference occurred near to high-voltage lines, transformers and some types of building.

**Action #1:** Avoid these if possible, or choose another place to operate the vehicle.

**Problem:** Loss of control.

**Cause:** Another radio control vehicle using the same frequency is operated near your vehicle. **Please Note: Do not use two cars at the same time near each other.**

\* Out of sight or the control range of distance. (15 to 20 feet.)

**Action:** Move to another place where radio frequency interference from another device or vehicle is not present.

#### **Care of Unit:**

The Mini Stunt Car can be wiped clean with any household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit in any fluids, as it will damage the contents and the electrical components.

#### **For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-TEC-TOYS or 1-800-832-8697  
customer\_support@enablingdevices.com