
Seek-N-Find - #692

USER'S GUIDE

We have redesigned the popular Find It toy. The objects have been replaced with ones that are larger and easier to find. Look for animals, stars, dice and many other items. The rotating cylinder has been motorized allowing the child to use a capability switch for search activation. In addition, the drum can be turned by hand if the child is able. The cylinder has a door to add or remove items. Size: 14½"L x 8"W x 4½"H. Requires 4 AA Batteries.

Battery Installation:

The Seek-N-Find requires 4 AA batteries to operate (Not included). Gently turn the unit over to reveal the black battery compartments. Carefully remove the small screw from each battery compartment cover using a small Phillips Head screwdriver. Observing polarity, install two brand new "AA" alkaline batteries into each battery compartment - four batteries total. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Replace both battery covers and screws.

Operation:

1. Connect the Seek-N-Find to any capability switch via the jack, which is located on the side of the unit. This unit is equipped with a 1/8-inch female jack, for use with capability switches with a 1/8-inch male connector. If you need to use a 1/4- to 1/8-inch adaptor for older switches with larger plugs, it must be a mono adaptor, not stereo (our item No.1170). Make sure that you have TIGHT connection between your switch and the Seek-N-Find. There should be no gaps.
2. Activate your switch and the drum will slowly turn while music plays. This will allow the user to look for the hidden objects. Once your switch is released the drum and music will stop.
3. To add or remove objects from the drum simply lift up and tip on the motor side of the drum. The drum is attached by a chain; this is the side you should be lifting from. Next slide the drum to the side just enough to pull the rod clear on the opposite side of the base. Now slide the rod out of the drum and unscrew the small Phillips Head screw from the access panel door, then slide the door to one side. After adding or removing objects slide panel back in place and replace screw. Slide the rod back into the drum and place drum back into base. Make sure the chain clip attached to the end of the rod is facing down into the base, if not the drum will not turn properly or get stuck and damage the unit.

4. The drum can also be turned by hand without the use of a switch.
Please Note: When using the Seek-N-Find this way the music will not play and the drum will only turn in one direction. You must turn the drum from the front of the unit which is the switch input side. The back of the unit is where the motor is mounted.

Troubleshooting:

Problem: The unit fails to operate, or operates incorrectly.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly. If the unit still does not work correctly, replace all the batteries with new alkaline batteries paying careful attention to proper polarity. Never mix old and new batteries together. Never mix different types and brands of batteries together. Doing so will shorten the life of all batteries.

Action #2: Try a different switch with the Seek-N-Find you know works in other devices to rule out your switch as the source of the problem. Or try your switch on another device you know works.

Action #3: Check that no debris or small objects are blocking or obstructing any of the moving parts on the Seek-N-Find.

Problem: Cylinder squeaks or moves slowly.

Action: Place a drop of oil on the aluminum rod beside the end-caps.

Problem: When I plug my switch into Seek-N-Find, the toy runs continually and the switch has no effect on it. What can I do?

Action: When plugging any switch into an adapted device, the plug must be pushed in completely with no gaps between the two connections. If the connection is not tight, the device will run continually and the switch will have no effect on the device connected to it.

Care of the Unit:

The Seek-N-Find can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.