

SLING WASHING INSTRUCTIONS

The sling should be inserted into a washing/laundry bag prior to being placed into the washer. This is to prevent any unusual wear and tear of the sling by the agitator and/or other parts of the washing machine. Please follow the following instructions for washing:

- Use mild detergent
- Set washing machine to Warm wash/cold rinse cycle
- Do not dry on steam pipes, conventional heaters, wood stoves, or other similar devices
- Tumble dry on air/fluff cycle only, or hang dry
- Do not use chlorine based bleach
- Do not dry clean


The following symbols are found in the sling serial number label. The meaning of the symbols is shown below:




Machine wash hot to temperature shown on label. In this example 176 F or 80 C



Do Not Bleach

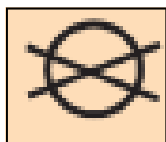

Do Not Dry Clean

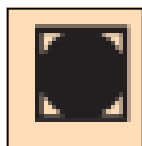

Tumble Dry, Normal, No Heat



Do not Iron

Handicare