



INDOOR SWING FRAME FEET (8SWRLF)

INSTRUCTIONS

Thank you for your purchase.

Inspect the entire unit **immediately** after you take it out of the box. If there is any concealed damage, please contact us immediately at 800-467-6222 to report. **You only have 5 days from receipt to report damage for replacement or refund.**



4537 Gibsonia Rd
Gibsonia, PA 15044



800-467-6222



info@tfhusa.com



www.specialneedstoys.com



Take time to familiarize yourself with the equipment, each component, and the recommended maintenance of this equipment before using or engaging any person with it. Please file this instruction sheet in an accessible location; this sheet must be read by and not alluded to anyone who is supervising or using TFH Equipment.

Packing List:

- Set of 4 Indoor Swing Frame Feet

For all four Swing Frame Legs:

1. Slide the plastic fitting inside the leg of the Swing Frame completely.
2. Contact our office with any questions.

IMPORTANT: TFH Swing Frames with Indoor Swing Frame Feet require a 10' ceiling height minimum.

Safety Precautions - The safety of your clients is dependent on the appropriate choice of activity to match yet challenge their physical abilities. Use appropriate spotting / safety techniques. In addition, the layout of your activity area, proper installation and maintenance of your equipment is critical. TFH equipment is not intended for general recreational use. Under no condition should this equipment be used without proper supervision. This sheet is for example only. It is not meant to, in any way, replace local, State, or Federal standards. Be aware - it is your responsibility to find all pertinent safety information that pertains to your facility.

All TFH Products are to be used under adult supervision at all times.

TFH032020