



## User Instructions


# Accessories for Augsburg (Shower & Commode Wheel Chairs For Children)

**Article No.: 444.00.97**  
Seat width / depth adaptor (A)  
including safety belt (B)

Serial Number

**Article No.: 444.03.39**  
Head support unit (C)

Serial Number


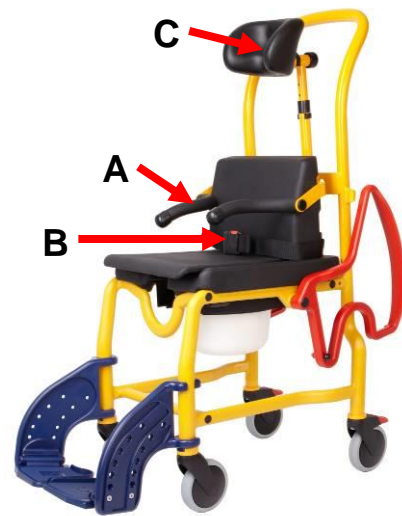


### Technical specifications

#### Adjustment area (armrest / backrest)

The **armrest** and the **backrest** may be adjusted by loosening the screws. To do this use the tube wrench and the hex wrench (accessory).

**Seat depth:** min. 250 mm, max. 295 mm  
**Seat width:** min. 225 mm, max. 325 mm

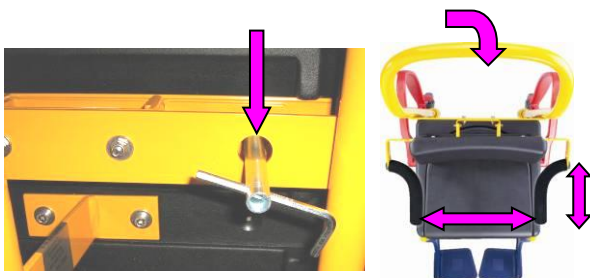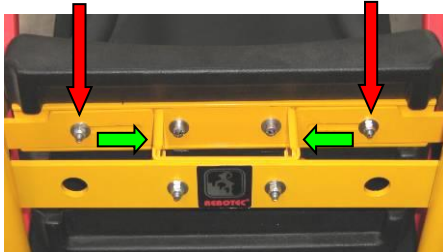



### Safety belt

#### Intended proper use

The safety belt is used for securing the child against falling over when bending forward.

#### Assembly

- Swivel the chair's armrests back.
- Pull the backrest up completely.
- Place the belt loops around the tubes.
- Then push the backrest back until it hits the striker.
- Attention! Do not pinch the loops!
- Swivel the armrests forward until they click in position.

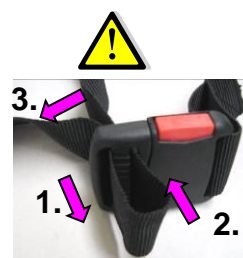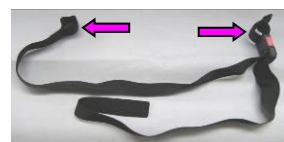

To adjust the belt, pull the loose end a ways out of the belt fastener and then retighten.

To open the belt, press the red button all the way down and pull the plastic buckle out.



## Head support unit

### Intended proper use

With the head support unit, support of the head can be adjusted to match the size of the child, thus offering an optimum relief and posture for the head and neck area.

**Article weight compl.: 1.7 kg**

### Components



Pcs.	Description	Art. No.
1	Head support unit compl. Depth: 3-stage adjustable Height: 7-stage adjustable	444.03.39
2	Screw M6x30 A2	850.56.30
2	Washer DIN 9021-6.4 A2	856.50.06

### Assembly

- Place it in the mounting fixture behind the chair.
- With the hex key, loosen both M6 hex screws that attach the back cushion, or seat width adaptor, to the back cross-piece.
- Next, screw on the complete head support unit (A) to the cross-piece (C) of the backrest using both M6 screws (B). Alternatively it may be mounted to the back cushion (D).

### Adjustment

The head support is adjustable to the front (E) and height (F), each by a clip (G). Pull the clip out, select the next hole, and then re-insert the clip.

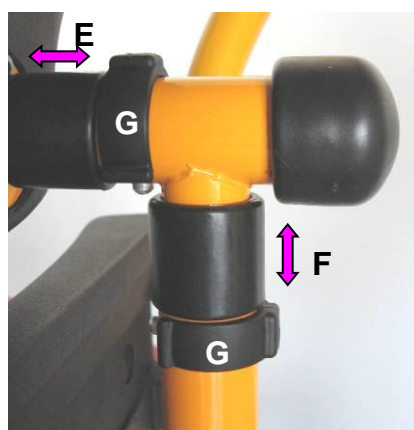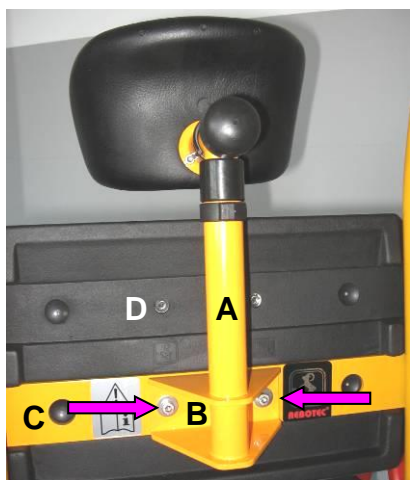

## Seat width and depth adaptor

### Intended proper use

Using the seat width and depth adaptor, the seat depth and seat width can be optimally adjusted to suit the size of the child. It assures maximum sitting comfort.

**Article weight compl.: 2.2 kg**

### Components

Pcs.	Description	Art. No.
A	Holder for back cushion	444.52.40
B	Bow for back cushion	444.52.30
C1	Armrest - left	444.52.60
C2	Armrest - right	444.52.65
D	Rail for the armrest	444.52.50
E	Back cushion	440.10.02
6	Flat round screw M6x20 A2	853.06.20
8	Washer DIN 9021-6.4	856.50.06
2	Cylinder screw M6x20 A2	850.56.30
2	Cylinder screw M6x30 A2	850.56.30
6	Hex nut M6 A4	854.52.06
1	Pipe key 10mm	859.00.10
1	Hex Allen key 5mm	858.00.05

### Assembly

- Place it in the mounting fixture behind the chair.
- Using the hex key, loosen both M6 hex screws with which the back cushion (E) is attached to the cross-piece (F) of the backrest.
- Screw the pre-assembled holder-back cushion (A+B) and the cross-piece (D) together with the pre-assembled armrests (C1+C2) to the backrest (E). Use the flat washers and the M6x20 cylinder screws. Tighten the screws with the Allen key.
- Next mount this entire assembly to the holder (A) to the cross-piece (F) of the backrest. To do this, use the flat washers, the M6x30 cylinder screws and the M6 hex key. Tighten the screws.

