



Waste Mate Trash Bag Installation and Cleaning Instructions

Installing the Trash Bag

1. Step on and hold the foot pedal to raise and hold the Waste Mate lid open.
2. Raise both bag loops about 30 degrees.
3. Place the trash bag in the Waste Mate between the bag loops.
4. Wrap the trash bag around on top of both bag loops.
5. Lower the bag loops (with the bag wrapped around the loops) to secure the trash bag in the Waste Mate.
6. Release the foot pedal to lower the lid.
7. Your Waste Mate is ready to use.



Removing the Trash Bag

1. Step on and hold the foot pedal to raise and hold the Waste Mate lid open.
2. Raise both bag loops and unwrap the trash bag from the bag loops.
3. Lift the trash bag from the Waste Mate and secure closed with twist-ties or other means.
4. Install a new trash bag following the steps above.

Cleaning Your Waste Mate

- When cleaning, only use a damp soft cloth or a plastic scouring pad for a cleaning cloth.
- Use a neutral dish soap or a mild non-abrasive detergent and lukewarm water.
- Do not use acetone, paint thinner, or other volatile solvents for cleaning.
- Do not use things that will scratch the surface, such as steel pads, wire brushes, and scrapers.
- For hard-to-clean spots, use standard household/vinyl cleansers and a soft bristle brush on troublesome spots or stains. Pre-soak heavy, dried-on soil if needed.
- If used in food preparation areas, clean frequently to avoid build-up.



Waste Mate Trash Bag Installation and Cleaning Instructions

This instruction sheet is for use with the following Waste Mate Plastic Trash Can models:

WM-8BEG	WM-8BLK	WM-8BLU	WM-8GRN	WM-8GRY	WM-8RED	WM-8WHT	WM-8YEL
WM-13BEG	WM-13BLK	WM-13BLU	WM-13GRN	WM-13GRY	WM-13RED	WM-13WHT	WM-13YEL
WM-18BEG	WM-18BLK	WM-18BLU	WM-18GRN	WM-18GRY	WM-18RED	WM-18WHT	WM-18YEL
WM-24BEG	WM-24BLK	WM-24BLU	WM-24GRN	WM-24GRY	WM-24RED	WM-24WHT	WM-24YEL