EasyStand StrapStand



Please ensure the Owner's Manual stays with the unit at all times.

SYMBOL LEGEND



CAUTION/ATTENTION



ENVIRONMENTAL CONDITIONS



PINCHPOINT



DATE OF MANUFACTURE



SEE INSTRUCTIONS FOR USE



SERIAL NUMBER



MANUFACTURER



Please be environmentally responsible and recycle this product through your recycling facility at its end of life.

Afin de préserver l'environnement, veuillez confier ce produit à votre centre de recyclage à la fin de sa durée de vie.

Nachdem dieses Produkt ausgedient hat, entsorgen Sie es bitte auf umweltfreundliche Weise, indem Sie es zu der entsprechenden Recyclingstelle bringen.

Wees a.u.b. milieubewust en recycleer dit product via uw recycleerder na het verstrijken van de levensduur.

Sea responsable con respecto al medio ambiente y recicle este producto al finalizar su vida útil en el lugar de reciclaje correspondiente.

Siate responsabili verso l'ambiente e riciclate questo prodotto, al termine della sua vita d'uso, presso la vostra sede di riciclaggio.

Kierrätä tämä tuote sen käyttöiän lopussa ympäristövastuullisella tavalla paikallisella kierrätyslaitoksella.

Var miljömedveten och återvinn denna produkt efter dess användning.


Vi ber deg ta hensyn til miljøet og resyklere dette produktet ved hjelp av de rette resykleringsfasilitetene når produktet ikke lenger kan brukes.

Vis venligst hensyn til miljøet ved at levere produktet til det nærmeste genbrugsanlæg, når det ikke længere fungerer.

Por favor, assuma responsabilidade ambiental, reciclando este produto em suas instalações de reciclagem no final de sua vida útil.

Table of Contents

Introduction
Safety Precautions
Assembly
Swing-Out Leg Assembly
Adjusting the StrapStand
Using the StrapStand
Options
Options & Parts Detail
Standing
Maintenance
Specifications
Limited Warranty

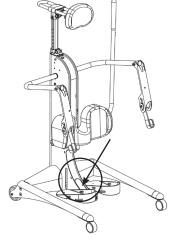

Note: The serial number is located underneath the rubber cover, inside the base.

Date Purchased

Serial #

^{*}Videos on assembly & fitting can be viewed at easystand.com/videos

Introduction

Congratulations on the purchase of an EasyStand standing frame! We at Altimate Medical have designed the EasyStand with comfort and happiness in mind.

EasyStand Description

The EasyStand line of products is intended for individuals who are able to transfer independently or with assistance from a caregiver and/or lifting device. It is a useful tool for rehabilitation, home, school, and work use. EasyStand standing frames support the user from sitting to the standing position. Various options such as support, choice of manual or Pow'r Up Lift may be added to facilitate individual needs.

Indications for Use

The EasyStand StrapStand product is intended to assist individuals who have difficulty rising from a seated position to a standing position and is indicated for individuals weighing up to 350 lbs.

This manual is an integral part of the standing system and should be read completely and thoroughly by anyone operating the unit. This will ensure the EasyStand is assembled properly and used in the most beneficial manner.

Altimate Medical recommends that an attendant be present when the EasyStand is being used. Should any problem arise that cannot be solved by reading this manual, please contact a local supplier or call Altimate Medical, Inc.

It is necessary to inspect the EasyStand StrapStand at least weekly to ensure it is in safe operating condition. EasyStand adjustments that are listed in the product owner's manual can be made by the operator by following the instructions for use. After an adjustment is made, inspect the EasyStand to ensure all hardware and adjustable components are properly secured per the instructions for use. Replacement of worn parts, major adjustments, or any other important corrections should be handled by an authorized supplier or service center. Only Altimate Medical, Inc., approved replacement parts should be used to ensure safety and performance.

Do not use the EasyStand without consulting a physician. Failure to consult a qualified physician prior to using the EasyStand could lead to severe medical problems. We recommend a good standing program be established and supervised by a qualified physician or physical therapist.


Join the Standing Community!


Our goal is simple - to empower people with disabilities to stand up for their health. Connect, share, and learn from other people with disabilities, special needs parents, clinical professionals, and the experts in standing on one of our social networks. By keeping your standing program "top of mind" you will have the greatest chance of maintaining a standing routine that maximizes all the benefits of standing!


Safety Precautions

 
- If a user does not meet these specifications and has not been properly fitted by a qualified therapist or physician, Altimate Medical, Inc., does not recommend using the EasyStand.
 - **StrapStand** is designed to accommodate most individuals from 5'0"-6'5" (152-195 cm) and up to 350 lbs. (159 kg) For more detailed specifications visit our website easystand.com
- Altimate Medical, Inc., recommends consulting with a therapist or physician prior to starting a standing program.
- Check the EasyStand periodically to ensure that all nuts, bolts and adjustable parts are tightened securely.
- Never make adjustments to the EasyStand while a user is in the standing position.
- Never reposition the foot plates while a user is in the standing position. Consult with a therapist or
 physician for proper foot placement and angle.
- It is necessary to inspect the EasyStand StrapStand at least weekly to ensure it is in safe operating condition. Pay particular attention for loose hardware. Replacement of worn parts, major adjustments, or any other important corrections should be handled by an authorized dealer or service center. Only Altimate Medical, Inc., approved replacement parts should be used to ensure safety and performance.
- If the EasyStand is being used in the home environment, please inspect the unit prior to each use to
 ensure there is no damage or unexpected wear to the EasyStand that may have been caused
 unintentionally by pets, pests or children.
- If the unit was exposed to temperatures of less than 50°F (10°C), the unit must warm to room temperature before use.
- Operating Conditions: Temperature: 41°F (5°C) -104°F (40°C), Relative humidity: 20% 90% at 86°F (30°C), Atmospheric Pressure: 700 to 1060hPa.
- Storage/Transport Conditions: Temperature: 14°F (-10°C) -122°F (50°C), Relative humidity: 20% 90% at 86°F (30°C), Atmospheric Pressure: 700 to 1060hPa.
- The EasyStand can be used at a maximum altitude of 3,050 meters (10,000 feet).
- The expected service life of an EasyStand is considered 5 years under normal use conditions. Note: This
 may vary based upon use.
- Use body weight to lower the seat. Do not use excessive force.
- The EasyStand is for indoor use on level surfaces only.
- Violently thrusting in the EasyStand may cause it to tip.
- Always put the rear casters and/or wheels in the locked position before transferring into the EasyStand.
 Use these locks to keep the EasyStand stationary.
- Please contact Altimate Medical, Inc., for relevant clinical data and literature.
- Altimate Medical products are specifically designed to be used with Altimate Medical accessories and options. Unless otherwise noted, accessories and options from other manufacturers have not been tested by Altimate Medical and are not recommended for use with Altimate Medical products.
- Product Modifications made without express written consent (including, but not limited to, modification through the use of unauthorized parts or attachments) are not recommended and will void the product warranty.
- Caution: This equipment is designed to accommodate a range of users; therefore the unit has various adjustment slots and holes. Avoid placing fingers or other body parts in any of these areas.
- Caution: While in use this equipment has various moving parts, familiarize yourself with the unit and avoid placing hands or fingers near any of these areas.
- **Caution**: Advise bystanders to keep clear of the unit while in use.

EasyStand StrapStand Assembly

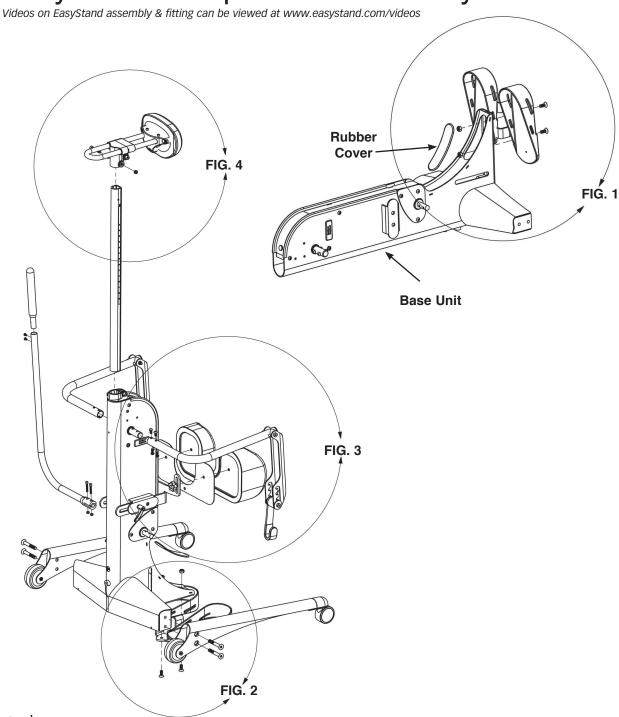

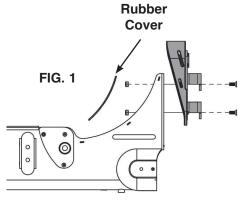

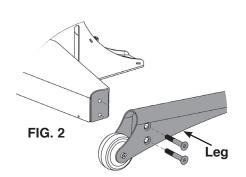




For foot plate adjustments, see p. 9

FIG. 2- Using the bolts provided, place the legs on each side of the base and tighten bolts securely.

For Swing-Out Leg assembly, see p. 7

FIG. 3- Remove bolts from the lifting rods, place the arms onto the lifting rod on the base, insert bolts and tighten securely.

FIG. 4- Insert the tray post into the front column with the mounting holes toward the top. Place the tray assembly onto the tray post, insert nut into slot and bolt into hole, tighten securely. The tray clamp on the front frame may need adjustment to fit the tray post into the frame.

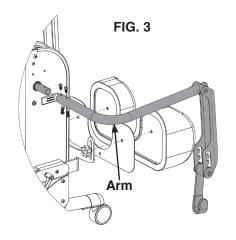

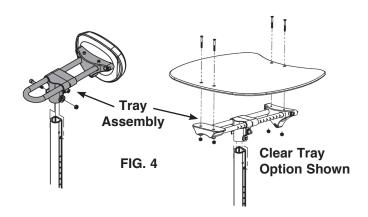
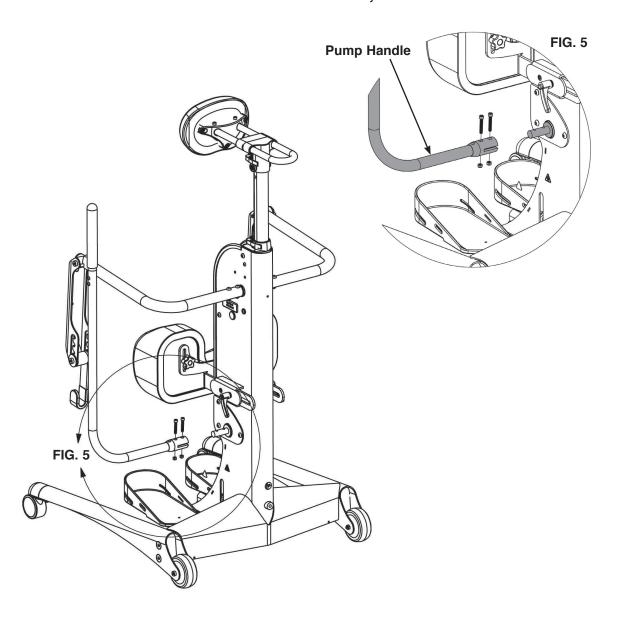
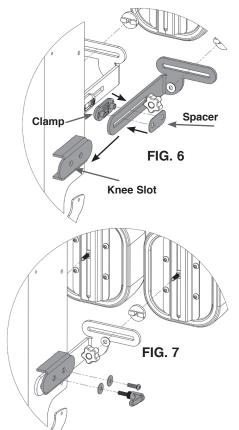


FIG. 5- Attach the pump handle to the pump on the base with bolts and nuts, tighten securely.





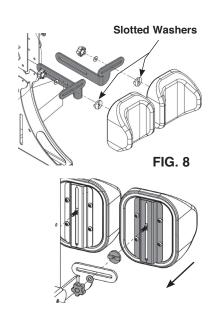


FIG. 6- Remove all hardware from the knee bracket. Make sure the 2 nuts are in the back side of the clamp, place the clamp into the knee slot on the unit. Place the knee bracket and the spacer into the slot making sure the spacer is between the knee bracket and knee slot, lining up with the clamp.

Note the curve of the knee bracket is up.


FIG. 7- Place washer onto the ratchet handle insert handle through the knee bracket, spacer and into the clamp.

Place washer onto the bolt, insert bolt through the knee bracket, spacer and into the clamp. Tighten snug, but allow knee assembly to slide freely.

FIG. 8- For standard knee pads, remove the three bolts from the knee pad, making sure the plastic insert stays in place. Place the knee pad onto the bracket and insert top two bolts before inserting the middle bolt. Tighten securely.

For independent knee pads, place the knee pads onto the knee pad brackets, tighten knobs securely. The narrow end of the slotted washer for the knee pads will be inserted into the bracket.


REFERENCE DRAWING ON P. 11.

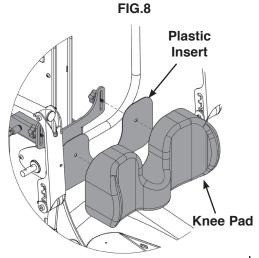


page 6

Swing-Out Leg Assembly

FIG. 9- Place the leg bracket onto the base with the single hole towards the bottom and the slotted hole toward the back. Apply provided loctite to bolts before inserting and tightening securely.

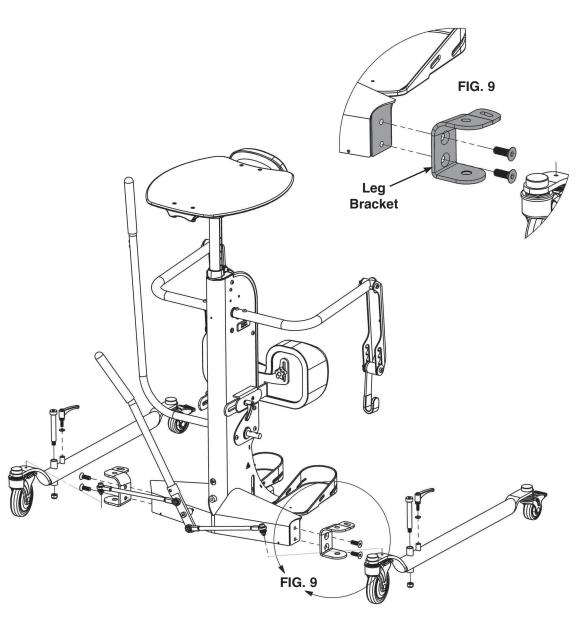

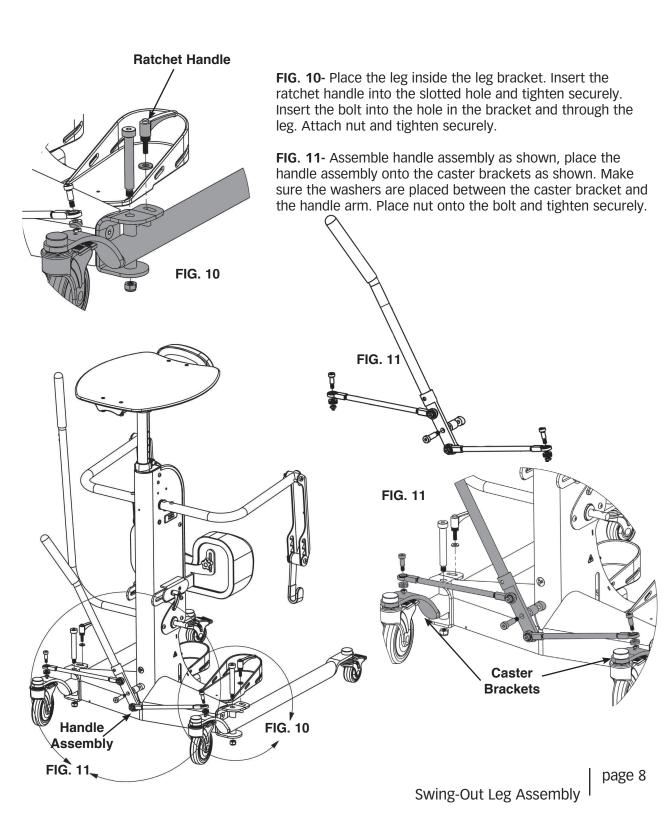

Adjusting the EasyStand StrapStand

Foot plates

Caution: Never reposition the foot plates while a user is in the standing position.

FIG. A- To adjust the abduction (toe out) of foot plates, remove the bolt under the front edge of the foot plate with a hex wrench. Lift up and turn the foot plate to desired position. Make sure the foot plate is positioned in one of the slots (3 positions for standard foot plate, 4 positions for optional, multi-adjustable foot plates) and re-secure with bolt.



FIG. B- Loosen the clamp connecting the foot bracket to the base to adjust the foot plate height and plantar/dorsi.

Position the height of the foot plate so the user's knee is centered in the knee pad. Tighten the clamp securely.

Caution: Avoid placing fingers in the adjustment slots.

Knee pad


FIG. C- To adjust the knee pad depth, loosen the knob and move into position. Tighten knob once desired position is achieved.

Table


FIG. D- To adjust the height of the chest pad or optional tray, loosen the clamp located just above the base. Lift the tray to the desired height and tighten the clamp.


To adjust the depth of the chest pad or optional tray, loosen the clamp located just below the tray. Move the front pad to the desired position and tighten the clamp.


Caution: While lowering the tray height, keep hands clear of the area underneath the tray.

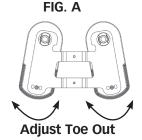

Adjust Height, Plantar/Dorsi

 

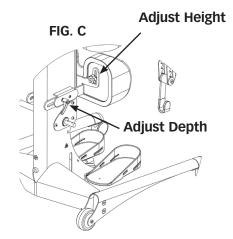

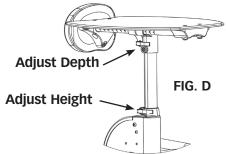

Using the EasyStand StrapStand

Consult a therapist or doctor before starting any standing program.



1. To use the StrapStand, position the wheelchair as close as possible to the knee pad. Casters on the StrapStand should be locked.



2. Position feet in the foot plates. Adjust knee pad height so knees are centered in the knee pad. With the wheelchair locked, slide forward on the seat so that the knees make contact with the knee pad.



3. Hook the strap to one of the lifting arms and bring the other side around the body. Then hook the strap to the other lifting arm.



4. After attaching the strap to the lifting arms, adjust the hook position. The strap can be adjusted to accommodate different size individuals. This will vary depending on the strap size and the girth of the individual.



5. Adjust the placement of the strap under the buttocks so that the top edge of the strap is slightly under the belt line. Slide it into place as shown.





6. Partially lift the user by pumping the actuator handle towards the user to tension the strap. At this time and if necessary, reposition the strap. Continue until the user is in the standing position. The user's wheelchair should remain in position and available so the user can return to the seated position.




Caution: Never adjust the strap while in the standing position.

Option Assembly

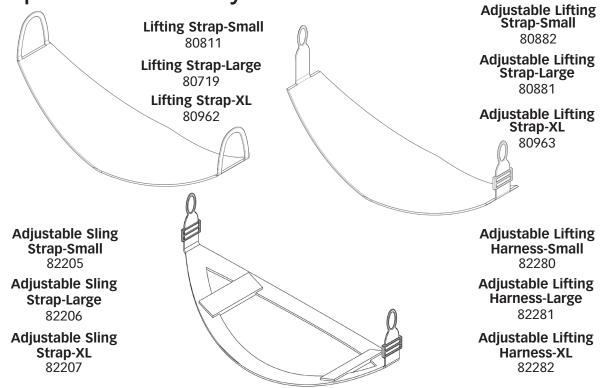

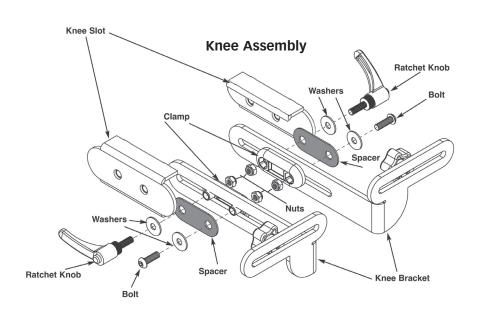


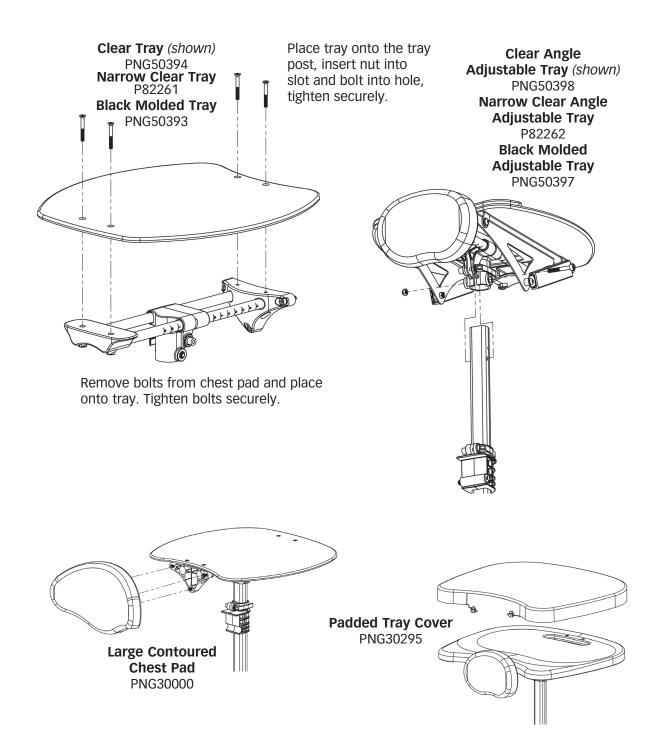

Multi-Adjustable Foot plates




Secure Foot Straps PNG30030-15"L PMG50505-21"L

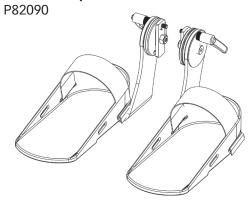



Foot Straps PNG30031-15"L PNG50506-21"L


XL Foot plate P82144

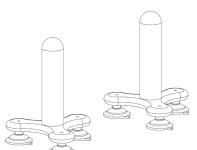


Hand Grips PNG50042

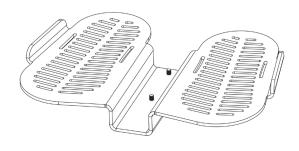

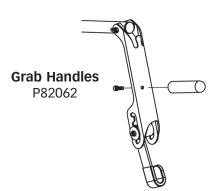

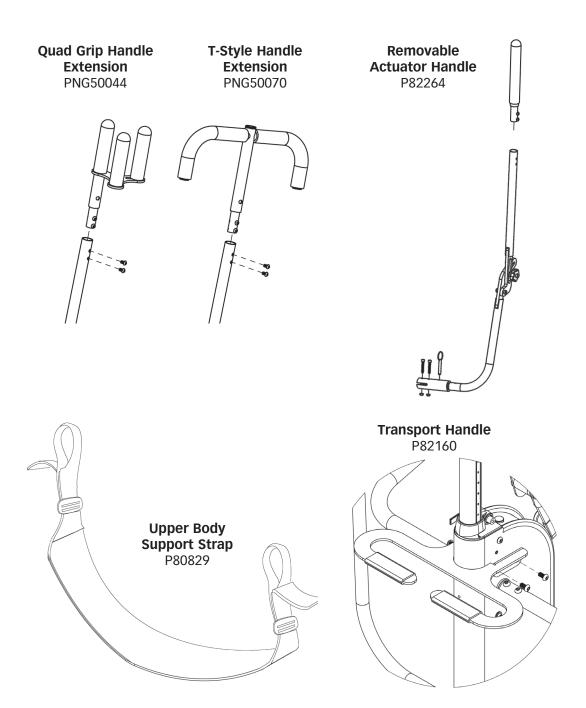

StrapStand Options & Parts Detail

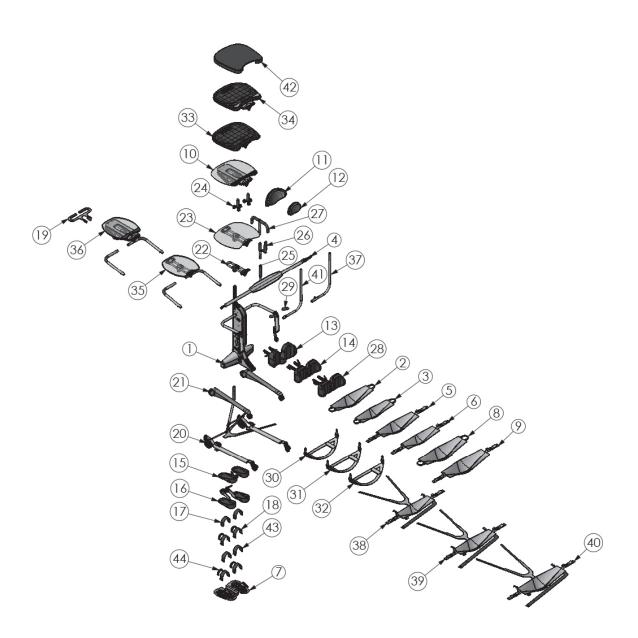

ITEM NO.	PART NO.	QTY.	NAME		
1	2000	1	2000 STRAPSTAND STANDARD		
2	80719	1	LIFTING STRAP 12"W X 28"L		
3	80811	1	LIFTING STRAP 9"W X 25"L		
4	80829	1	STRAP BACK LIFTING		
5	80881	1	ADJ LIFTING STRAP 12"W X 29"L		
6	80882	1	ADJ LIFTING STRAP 10"W X 26"L		
7	82144	1	FOOT PLATE OVERSIZED STRAPSTAND		
8	80962	1	LIFTING STRAP 14"W X 32"L		
9	80963	1	ADJ LIFTING STRAP 14"W X 32"L		
10	NG50366	1	ASMBLY TABLE TILT CLEAR		
11	NG30000	1	PAD FRONT EXTRA SUPPORT		
12	NG30001	1	PAD CHEST STANDARD		
13	82202	1	STANDARD KNEE STRAPSTAND		
14	82101	1	ASMBLY KNEE INDEPENDENT STRAPSTAND		
15	82091	1	STRAPSTAND STANDARD FOOT ASSEMBLY		
16	82090	1	FOOT ASMBLY STRAPSTAND		
17	NG30030	1	FOOT STRAPS 15"L		
18	NG30031	1	SECURE FOOT STRAPS 15"L		
19	82160	1	GRAB HANDLE STRAPSTAND		
20	82188	1	SWING OUT LEG ASSEMBLY		
21	82186	1	STANDARD LEG OPTION		
22	NG50295	1	ASMBLY NO-TABLE OPTION		
23	NG50248		TABLE EVOLV ACRYLIC		
24 25	NG50042	1	SUPPORT GRIP OPTION		
	NG50260	-	HANDLE STANDARD TOP		
26 27	NG50044 NG50070	1	QUAD GRIP OPTION		
28	82189	1	ACTUATOR HANDLE EXTENSION EVOLV LG ASMBLY KNEE ROHO IND STRAPSTAND		
29	82062	1	STRAPSTAND GRAB HANDLES		
30	82205	1	ADJ SLING STRAP 9"W X 25"L		
31	82206	1	ADJ SLING STRAP 12"W X 28"L		
32	82207	i	ADJ SLING STRAP 14"W X 32"L		
33	NG50247	i	TABLE EVOLV STANDARD		
34	NG50348	i	ASMBLY TABLE STANDARD TILT		
35	82261	i	NARROW ARM/PUMP HANDLE/TABLE OPTION		
36	82262	1	NARROW ARM/PUMP HANDLE/TILT TABLE OPTION		
37	82264	1	REMOVEABLE PUMP HANDLE STRAPSTAND		
38	82280	1	ADJ LIFTING HARNESS 10"W X 26"L		
39	82281	1	ADJ LIFTING HARNESS 12"W X 29"L		
40	82282	1	ADJ LIFTING HARNESS 12 W X 27 L ADJ LIFTING HARNESS 14"W X 32"L		
41	82286	1	PUMP HANDLE STRAPSTAND		
42	NG30295	1	PADDED TRAY COVER		
43	NG50505	1	FOOT STRAPS 21"L		
44	NG50506	1	SECURE FOOT STRAPS 21"L		

Standing

To Stand

!\ Caution: Please consult with a physician or therapist before starting a standing program.

To stand, position the lifting strap behind the hips and attach it to the lifting arms. After positioning feet and knees, pump the manual actuator handle to lift user from a wheelchair to the standing position. The wheelchair should remain in position and available so the user can return to the seated position.

(1) Caution: Never make adjustments to the EasyStand while a user is in the standing position.

To Return to the Seated Position

Push the pump handle away from the user until the desired position has been reached. The strap will slowly lower until the handle is released. If experiencing difficulty lowering the strap, try applying less or more pressure to the pump handle. If the unit is in the standing position and unoccupied, apply moderate pressure to the strap. Do not use excessive force.

Contraindications

Standing/weight bearing may not be an option for the following reasons: If the user has severe contractures or range of motion issues If the user has severe osteoporosis or brittle bone disease If the user has postural orthostatic hypotension

If the user has dislocated joints

/!\ Caution: Consumers considering a standing program should consult with a qualified physician and medical team to determine what indications or contraindications exist. Clinicians must use best clinical judgment to evaluate the user's needs.

Implementing a standing program must be determined on an individual basis by the user's team (Physician, Physical or Occupational Therapist, Rehab Technology Professional/Supplier and the consumer). Consider all indications and contraindications for each client individually to determine if standing/weight bearing is appropriate.

Maintenance

Cleaning/Disinfecting

- Clean the EasyStand StrapStand with a mild, non-abrasive disinfectant or soap and water.
- Check your EasyStand periodically to make sure all nuts, bolts and adjustable parts are tightened securely. Failure to do so could result in parts falling off, which may cause a choking hazard for children.
- Do not use bleach or any other bleach based cleaners on EasyStand standing frames.
- Disinfecting wipes are safe to use on metal and non-porous surfaces.
- Use a damp sponge with mild soap or a mild, non-abrasive disinfectant.
- Spot clean Neoprene with mild soap and water.
- Neoprene covers may be removed and hand washed with water and air dried. Always use care when removing
 and replacing the covers.

Urethane Coated Fabrics (Dartex or generic equivalent)

- The recommended cleaning and disinfection instructions should be followed whenever possible to avoid damage to the PU membrane which could lead to premature failure of the cover.
- For superficial dirt use a disposable wipe and a warm solution of neutral detergent. Do not use abrasive cleaners.
- Disinfect using a 0.1% sodium hypochlorite solution (1000ppmm chlorine), stronger bleach solutions are not recommended
- Thoroughly wipe off any cleaning solutions with clean water and dry fabric before re-use or storage.
- Do not iron.

Hydraulic Actuator Maintenance

- An initial break-in period of approximately 50-100 full cycles is normal for the hydraulic unit. You may experience
 a squeaking or a less-than-smooth stroke. The very close fit of its mating parts gives each pump its own break-in
 "feel" and signature sound.
- If the pump is leaking oil, call a local EasyStand Supplier for a replacement. The EasyStand serial number will be needed.
- Do not exert excessive force on the pump handle or use the pump handle to move your EasyStand around. This may cause damage to the pump handle and/or the pump mechanism and will void any warranty.
- User maintenance is not required or recommended on the hydraulic pump. Never apply lubricant, household oil, grease, or a similar product to any part of the unit. Some compounds may react with the seals used in the manufacture of this product. This may damage the unit and will void any warranty.
- Do not exceed the rated weight limit.
- If the EasyStand was shipped during or exposed to a temperature of less than 50 degrees Fahrenheit (10°C), allow
 the hydraulic unit must warm to room temperature before any use. Failure to do so could damage the unit and
 render it inoperable.
- Once the standing position is reached, the pump may settle back one stroke, this is normal.
- It may not be necessary to push the pump handle all the way forward to lower the strap. If experiencing difficulty
 lowering the strap, try pushing the handle into different positions.
- If the unit is in the standing position and unoccupied, it is necessary to apply pressure to the strap of the unit
 while pushing the pump handle forward.

Purging The Hydraulic Actuator

The hydraulic pump on the EasyStand has a high probability of getting air trapped in the internal workings of the unit. This is usually caused by in-transit handling and is quite normal. Please follow the simple steps below, as manual hydraulic systems may never operate properly unless the entrapped air is correctly purged. The unit must be at room temperature for this procedure.

- 1. Pump the handle until the full extension is reached.
- 2. Continue pumping the handle slowly for an additional 10 strokes. This will properly purge the system.

Specifications

Height Dange	5'- 6'5	<i>"</i>	152-195cm
Height Range Weight Limit	350 lb		159kg
Strap Size - large	12"x28		30x71cm
Strap Size - small	9"x25"		23x64cm
Knee Pad Height, footplate to top of pad		21 inches	46 to 53 cm
Knee Pad Width, center to center	es	23cm	
Knee Pad Width, center to center Knee Pad Depth Range, from back of heel	·1/2″	15 to 24 cm	
Front Pad Depth Range, from back of heel		2-1/2 inches	5 to 32 cm
Front Pad Height Range, from foot plate to	56 inches	102 to 142 cm	
center of pad	oo menes	102 to 112 till	
Inside Width / Wheelchair Access	,	58cm	
Footprint, Standard Leg	34 x 2		86 x 71cm
Arms Standard Width		79cm	
Frame Color	Oxford	Gray	
Upholstery Color			
Weight of Basic Unit, Approximate	125 lb:	S	57 kgs
OF	TIONS		
Lifting Strap - Small	9"x25"	23x64cm	
Lifting Strap - Large		12"x28"	30x71cm
Lifting Strap – XLarge	14"x32"	36x81cm	
Adjustable Lifting Strap – Small		10"x26"	25x66cm
Range		0"-8"	0-20cm
Adjustable Lifting Strap – Large	12"x29"	30x74cm	
Range	0"-8"	0-20cm	
Adjustable Lifting Strap – Xlarge	14"x32"	36x81cm	
Range	0"-8"	0-20cm	
		Service Reservice Services	
Tray Height Range from Footplate	42 to 58 inches	107 to 147 cm	
Subtract height for acrylic tray	1 inch	2.5 cm	
Tray Size, Molded or Acrylic	21 x 24 inches	53 x 61 cm	
Tray Narrow Size	18"x19"	46x48cm	
Arms Narrow Width	29"	74cm	
Independent Knee Pads	0.440.4	0 . 00	
Depth Range, from back of heel	3-1/2 to 8 inches	9 to 20 cm	
Height Range, from foot plate – top o	17 to 22-1/2 in.	43 to 57 cm	
Lateral Range, center to center	8 to 12 inches	20 to 30 cm	
Multi-Adjustable Feet, height from floor	1 to 5 inches	2.5 to 13 cm	
Plantar / Dorsiflexion Adjustment	-20/+20 degrees		
Toe in – Toe out adjustment	Neutral to + 15 degrees		
Swing-out Legs, wheelchair width to	38 inches	97 cm	
owing out Legs, wheelenan width to	30 in. width x 38-	57 GH	
Swing-out Legs, Base Footprint	1/2 in. length	76 x 98 cm	
Actuator Handle Extension	Adds 7"	Adds 18cm	
Angle Adjustable Table, range	0 to 35 degrees		
Upper Body Support Strap, pad size	5.5"x24"	14x61cm	
Adjustment range	33"-70"	84-178cm	
XL Foot plate Placement area (each foot)	7"x14"	18x36cm	

Limited Warranty

This warranty is extended only to the original purchaser/customer (or supplier/non-consumer who does not buy or resell). Altimate Medical, Inc. warrants the EasyStand StrapStand against defects in materials and workmanship as listed below.

- Steel Frames 5 year warranty
- Hydraulic Actuator 2 year warranty
- Upholstered components, plastic pads, rubber parts, painted surfaces, bearings and other parts not specifically identified above 90 day warranty

The warranty period commences for the consumer on the purchase date from the seller/supplier. If the product is rented or otherwise not sold to a consumer, the warranty period commences from the date of invoice from Altimate Medical. Any product proven to Altimate Medical satisfaction to be defective and within warranty period, shall be repaired or replaced at Altimate Medical's option.

ALTIMATE MEDICAL SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO SUCH REPAIR AND/OR REPLACEMENT. This warranty does not include any labor charges incurred in replacement parts installation. Freight charges to factory are at the expense of consumer to seller. Return freight charges will be prepaid by Altimate Medical. For warranty service, please contact the authorized supplier from whom you purchased your Altimate Medical product. In the event you do not receive satisfactory warranty service, please write directly to Altimate Medical at the address below. Do not return products to our factory without prior authorization.

LIMITATIONS AND EXCLUSIONS: The foregoing warranty shall not apply to serial numbered products if the serial number has been removed or defaced. Products subject to negligence, abuse, misuse, improper operation, improper maintenance, improper storage, or damages beyond Altimate Medical's control are not covered by this warranty, and that evaluation will be solely determined by Altimate Medical. Products modified without Altimate Medical's express written consent (including, but not limited to, modification through the use of unauthorized parts or attachments) are not covered by this warranty. The warranty shall not apply to problems arising from normal wear or failure to follow instructions. The warranty will be void if parts not manufactured by Altimate Medical or parts not complying with original equipment specifications are added to an Altimate Medical product.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ALTIMATE MEDICAL SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.

Altimate Medical maintains a policy of continual product improvement and reserves the right to change features, specifications, and prices without prior notification. Check with Altimate Medical for latest information.

Environmental Issues

After life of the product:

- Recycle in accordance with the recycling codes of your country
- Recycle all metal parts
- Plastic parts should be disposed of or recycled according to the directive in your country
- Please inquire at your local disposal management and recycling center for local codes
- Return hydraulic actuator to Altimate Medical, Inc.





