
What Does the Fox Say? #9316

USER'S GUIDE

YouTube sensation, adapted!

Activate your capability switch and this cool fox comes to life, dancing and singing the original licensed tune, “The Fox—What Does the Fox Say?” sung by the group Ylvis. Size: 7"L x 9"W x 12"H. Requires 3 AA Batteries. Weight: 1½ lbs.

Operation:

1. The Fox requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the Fox’s feet. Using a Phillips head screwdriver open and remove the batter covers. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment covers and secure it with the screws. Set the ON/OFF switch to ON.
4. Connect the Fox to any external capability switch (not included) via the jack located at the end of his cord. The Fox is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch or press the front of his foot, he will come to life, dancing and singing the original licensed tune, “The Fox—What Does the Fox Say?” Pressing your switch or his foot while he is singing will stop him. Pressing your switch or his foot again will start him from the beginning of the song.

6. When finished using the Fox turn his ON/OFF switch to off to prevent false activations and to prevent battery drain.

Troubleshooting:

Problem: The Fox does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using the Fox for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. The Fox is surface washable only.