




"We Do Care - We Do More"

# MJM International Corporation

323 East Owassa • Suite 4 • Edinburg, TX 78539 • P.O. Box 720054 • McAllen, Texas 78504  
1-800-270-6199 • 956-781-5000 • Fax: 956-781-5552 • www.mjminternational.com • sales@mjminternational.com

## IDENTIFY COMPONENTS TO START ASSEMBLY

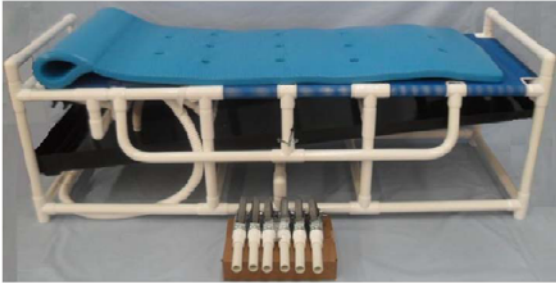

- ☐ SHOWER GURNEY FRAME WITH PAD.
- ☐ 1 BOX WITH CASTERS AND SCREWS
  - 4 CASTERS WITH BRAKE.
  - 2 CASTERS NON BRAKE.

## STEP 1. CASTERS



- ☐ INSERT CASTER LEG STEMS INTO BASE SECTION.

**NOTE: A PHILLIPS SCREWDRIVER OR A CORDLESS HAND DRILL IS REQUIRED TO TIGHTEN/SECURE ALL SCREWS.**

## STEP 2 CASTERS.



- ☐ DRILL THROUGH LEG PIPES USING 1/8 DRILL BIT AND PILOT HOLES AS REFERENCE.


## STEP 3 CASTERS.



- ☐ SECURE CASTERS USING 1/2" RETAINING SCREWS.

**Note: Model 920, 920-P and 915 do not take the drain pan, drain hose, or closed cell foam pad.**

## STEP 4 SECURE RAILING.

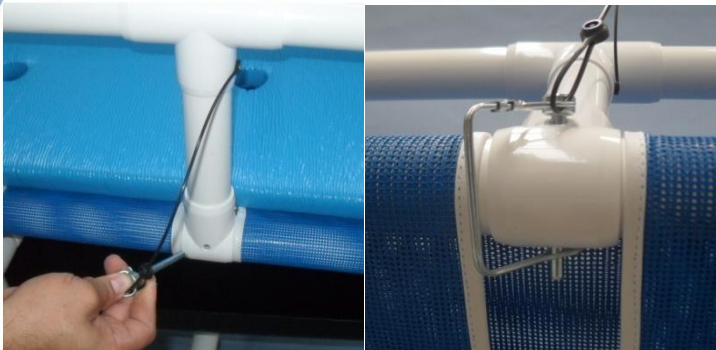

- ☐ SECURE RAILING WITH WIRE LOCK PIN (LOCK PIN ON OPPOSITE SIDE OF FITTING).

## STEP 5.



- ☐ PRODUCT COMPLETELY ASSEMBLED

**NOTE: CASTERS, RAILING, WIRE LOCK PIN MUST BE CHECKED AND PROPERLY SECURED PRIOR TO USING SHOWER GURNEYS. WARNING NOT SECURING ALL THE ABOVE CAN CREATE A SERIOUS SAFETY HAZARD.**

Rev: 1.3