



## EZ-Ride Handle Bar Reversal Instructions


1. First, take off the front bracket by removing the four 4mm hex screws and rest the handle bars beside EZ-Ride.

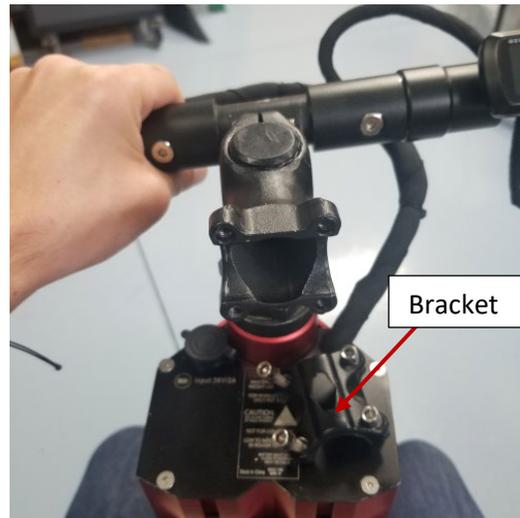

2. Then loosen the two screws that clamp the handle bar stem to the steering column using a 5mm hex key. Only loosen the stem until it is able to rotate.

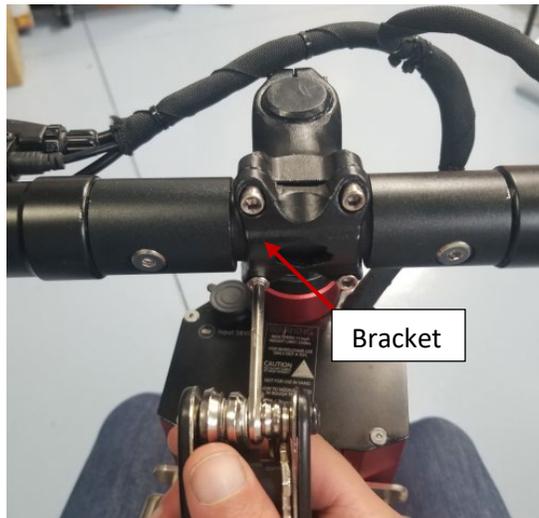

3. Rotate the stem 180 degrees and looking down from the top of the EZ-Ride and line up the stem with the drive wheel. Once both are lined up properly, tighten the stem down switching between the two screws so they are both tightened down evenly.

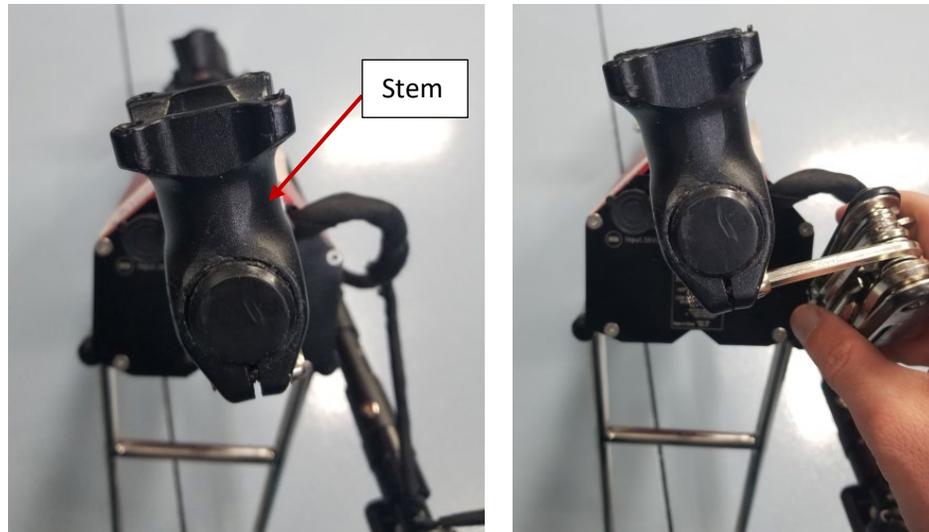

4. Place the handle bars back on along with the bracket and start by hand tightening the four screws to get the threads started. Then tighten the screws in a pattern using the multitool so all screws will be tightened down evenly.



All done! That was EZ!