

PART #: F-30600

MANDATORY – LEAVE THIS MANUAL WITH LIFT OWNER



Read & follow all instructions Lift safety can only be ensured if the lift is installed and operated according to these instructions



NEVER permit children to play on or around the lift Do not allow children to use the lift without adult supervision



NEVER apply direct water pressure to the electronics





NEVER use the lift with a dry pool





For safety reasons, NEVER swim alone

9889 Garrymore Ln Missoula, MT 59808 888-687-3552 | +1-406-549-0769 aquacreek.com



SAVE a copy of these instructions

•

Packing List & Installation Instructions


PACKING LIST:

QTY	DESCRIPTION
1	WOOD DECK ANCHOR
1	TAMPER RESISTANT LID


INSTALLATION INSTRUCTIONS:


- Find the desired location for the lift. The setback (the distance from the center of the anchor to the pool wall) must be 20" or less as shown in FIGURE 1.
- Reinforce the deck using 2X6 material as shown in FIGURE 2, FIGURE 3 and FIGURE 4. The reinforcing boards should be about 2-feet long so they extend at least 7" past the mounting bolts on each side as shown in FIGURE 1.
- 3. Drill a 3" hole through the decking at the desired location for the body of the anchor.
- 4. Place the WOOD DECK ANCHOR in the 3" hole (upside down) and spin it until the four (4) mounting holes line up in a square pattern parallel with the joists & reinforcing boards as shown in FIGURE 1. Mark the four (4) mounting-bolt hole locations. Remove the anchor.
- 5. Drill 7/16" holes at the marked locations. Make sure to drill straight down, perpendicular to the deck, all the way through the deck and the reinforcing boards.
- 6. Install the WOOD DECK ANCHOR using four (4) 3/8" x 4" carriage bolts and 3/8" locking nuts (not included).


NOTE: For thick decks the bolts might need to be longer.

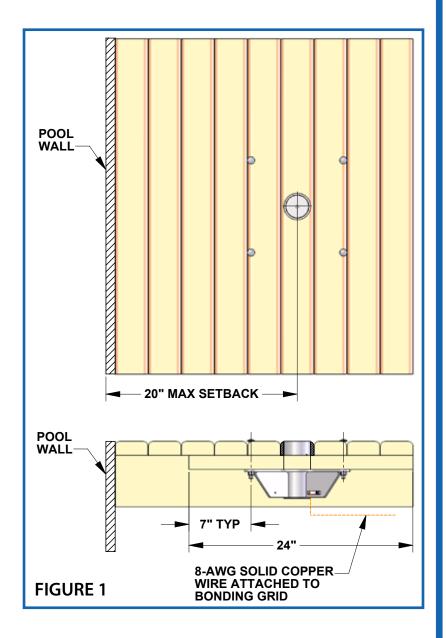

*NOTE: Bond anchor to bonding grid with 8-AWG solid copper wire per local electrical codes as required.

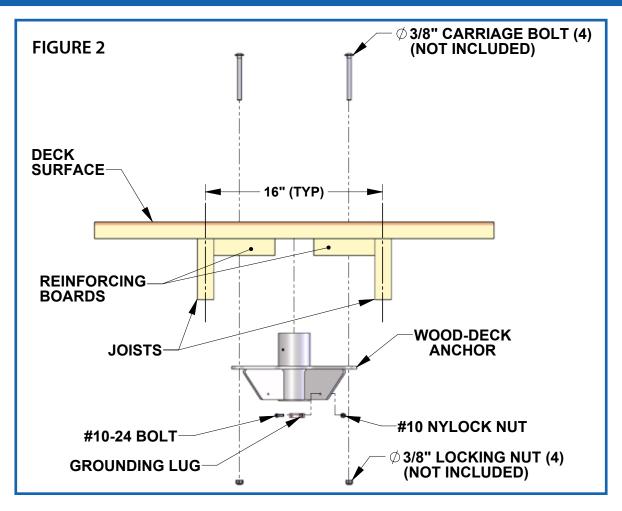

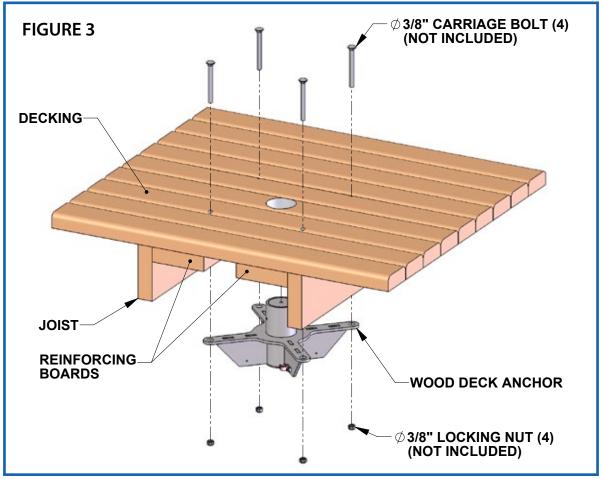

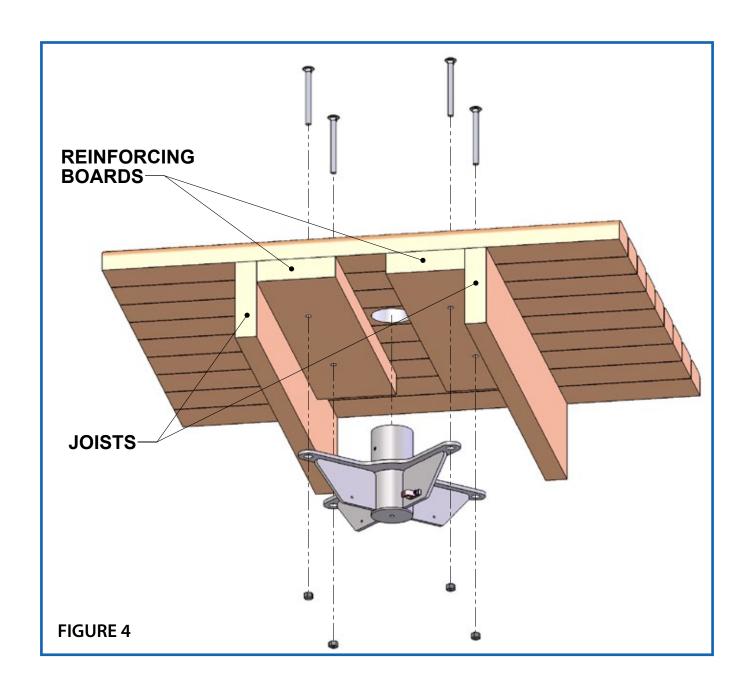

4